

SS48P

Ballast Type: Electromagnetic
 Input Voltage: 120VAC+5%,-10%
 Input Frequency: 60 Hz.

Starting Method: Preheat Self Start
 Lamp Connection: Series
 Unit Color: White

Unit Weight: 0.78 lb
 Carton Quantity: 60
 Skid Quantity: 1920

ELECTRICAL SPECIFICATION:

Line Voltage (V)	Lamp Type	Lamp Watts	No. of Lamps	Line Current (A)	Input Power (W)	Power Factor	Max Current THD (%)	Current Crest Factor	Ballast Factor	Wiring Diagram	B.E.F.
120	F4T5	4	1	0.17	8	≤ 0.40	≤10	≤1.7	1.00	006	12.50
120	F6T5	6	1	0.16	9	≤ 0.45	≤10	≤1.7	1.00	006	11.11
120	F8T5	8	1	0.15	9	≤ 0.50	≤10	≤1.7	1.00	006	11.11

PERFORMANCE:

- Electromagnetic reactor type ballast
- Preheat self start
- Series operation
- Normal power factor
- Encased and potted
- Sound rated A
- Meets ANSI C82.1


APPLICATION:

- Maximum case temperature: 194°F/90°C
- Maximum ambient temperature: 104°F/40°C
- Minimum starting temperature Linear: 50°F/10°C
- Remote mounting: 10ft.

SAFETY:


- UL/935 (Class P, Type HL, Type 1 outdoor) listed
- CSA/C22.2 certified
- Automatic reset thermal protection
- No PCB's
- RoHS Compliant

STYLE:

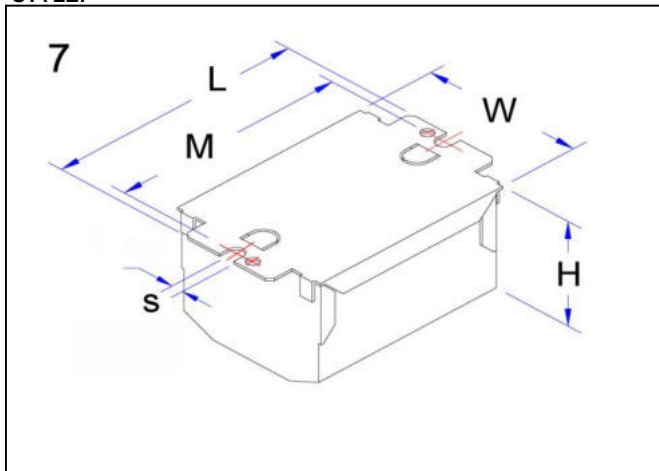

H	W	L	M	S
1 7/16	1 7/8	3	2 3/4	3/16
1.44	1.88	3.00	2.75	0.19
3.66 cm	4.78 cm	7.62 cm	6.99 cm	0.47 cm

WIRING DIAGRAM:

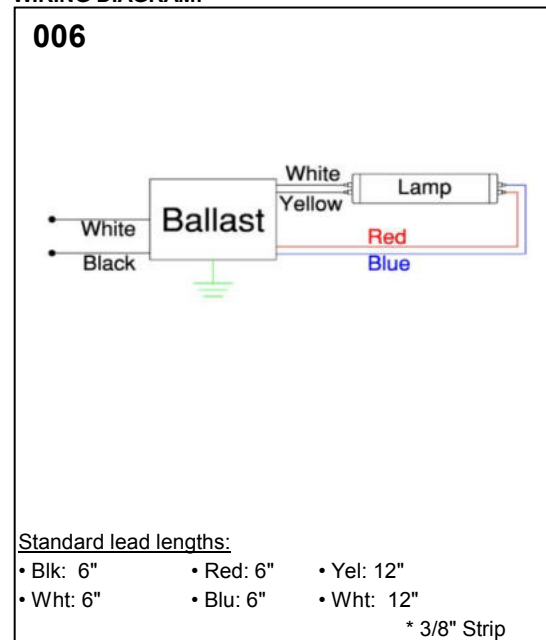

WARRANTY

Robertson Worldwide warrants to the purchaser that this ballast will be free from defects in material or workmanship for a period of 2 years from date of manufacture when properly installed and under normal conditions of use. For more information on Robertson Worldwide's ballasts, call 1-800-323-5633 or visit www.robertsonww.com. Specifications subject to change without notice.

Revised 12/17/10

ROBERTSON WORLDWIDE

13611 Thornton Rd, Blue Island, IL 60406, TEL: 1-800-323-5633, FAX: 1-877-388-2420, www.robertsonww.com